


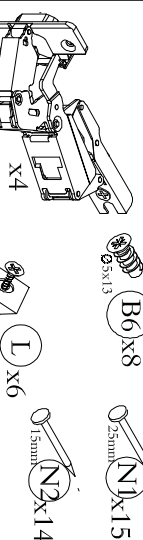







CAMPARI WNPP 6

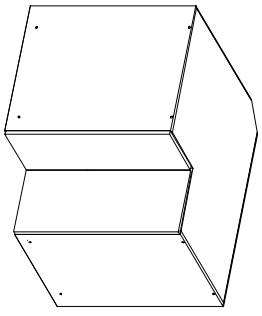






1.

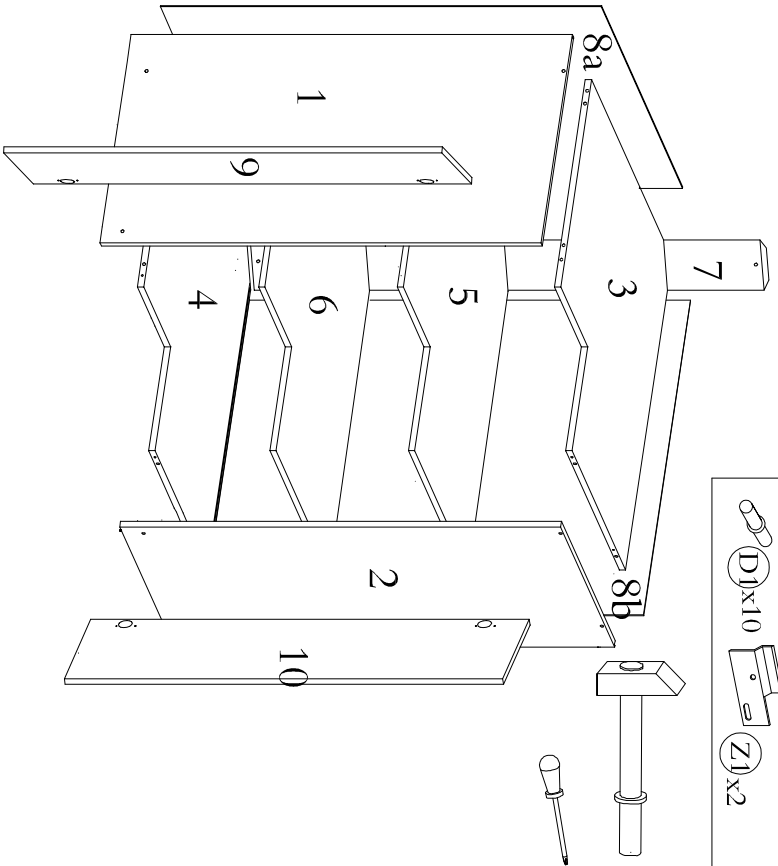



2.

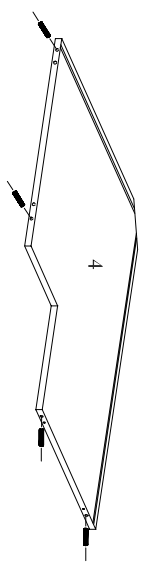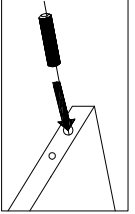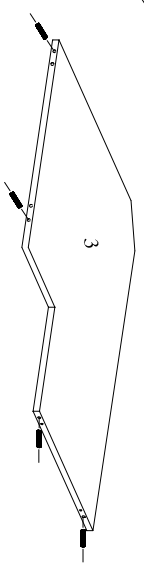


3.

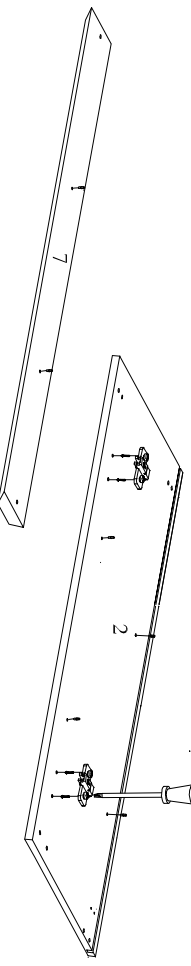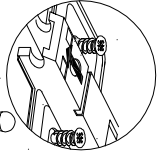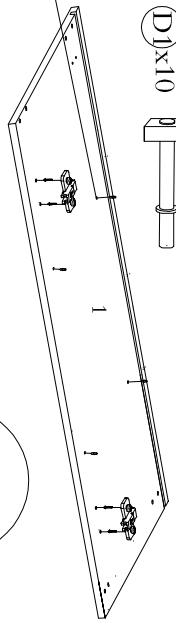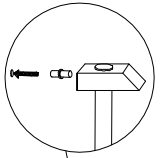




4.

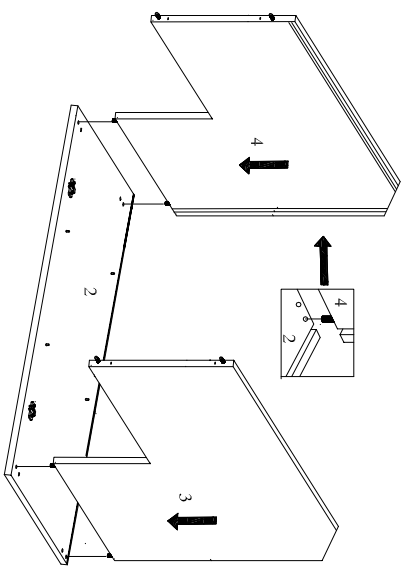




5.1

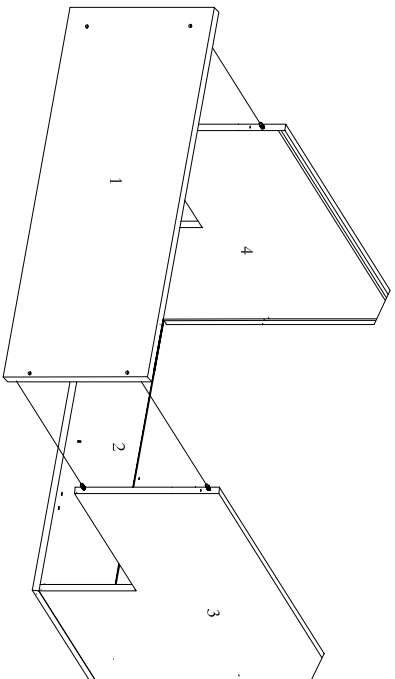


5.2

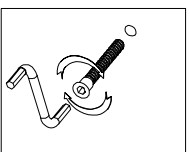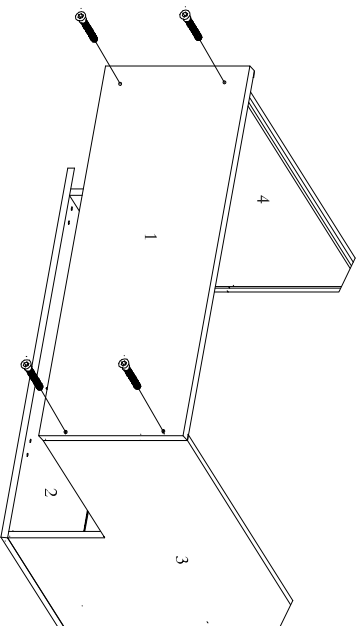



5.3

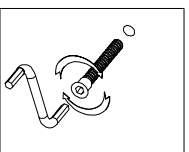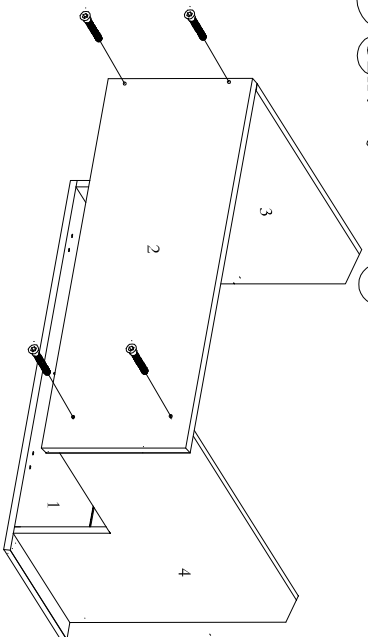



5.4

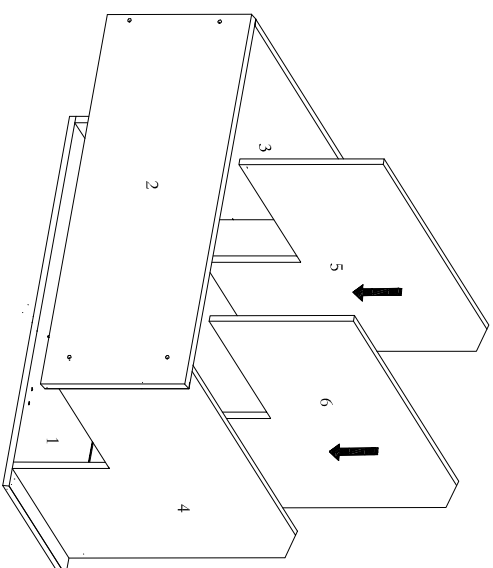




5.5

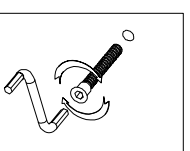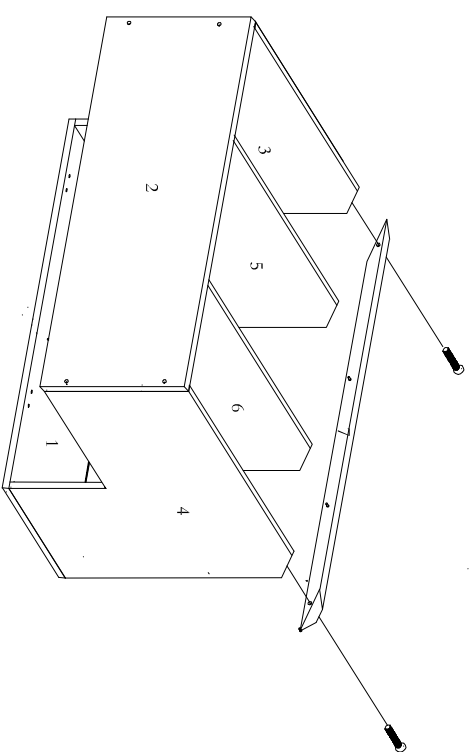

- 6. L x6 N1 x15 Hammer

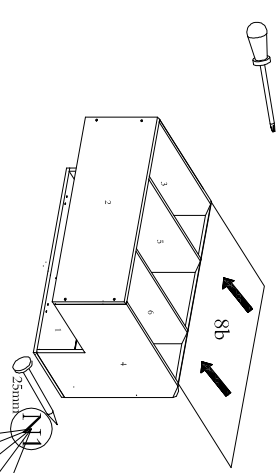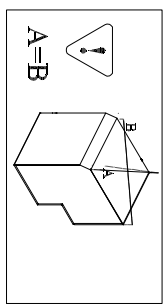


6.1

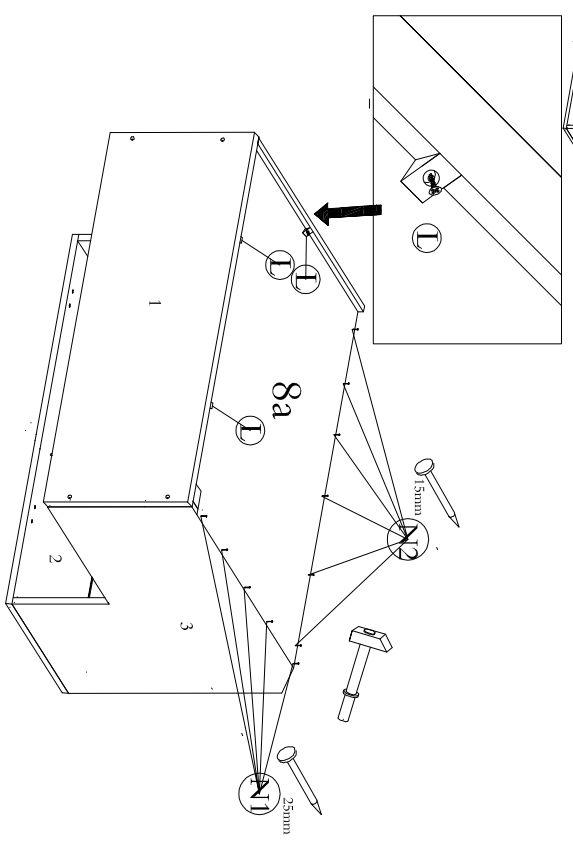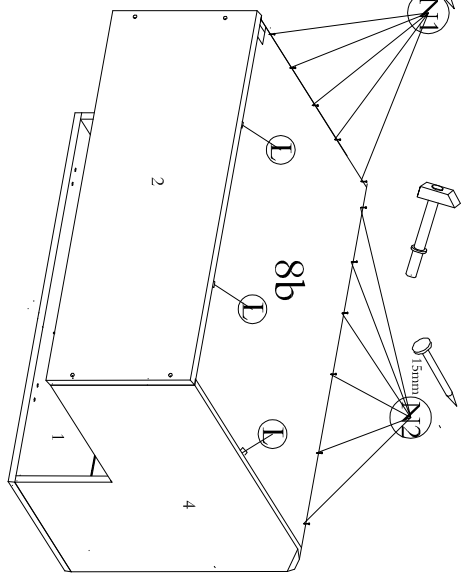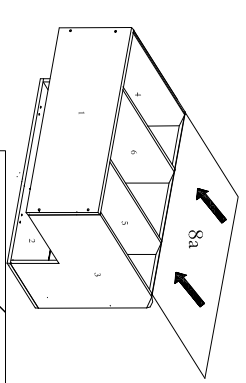

5/7



- 7. Screwdriver






B3 x4




B6 x8

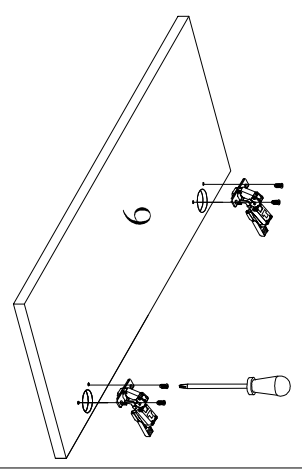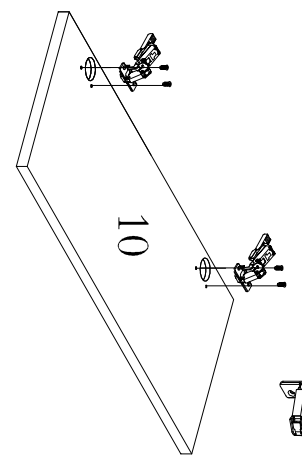


8.

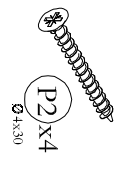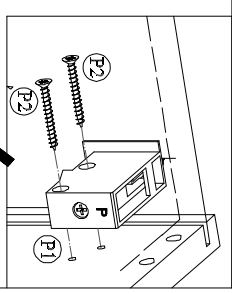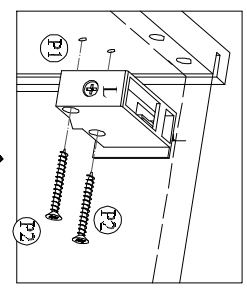

P2 x4
Ø 4x30



P1 x1

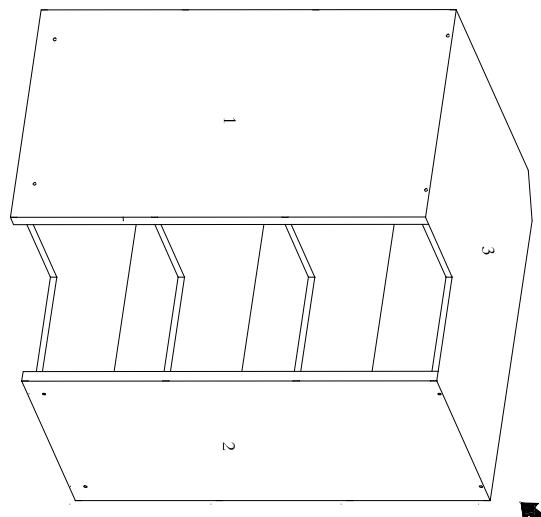

6/7

9.

