

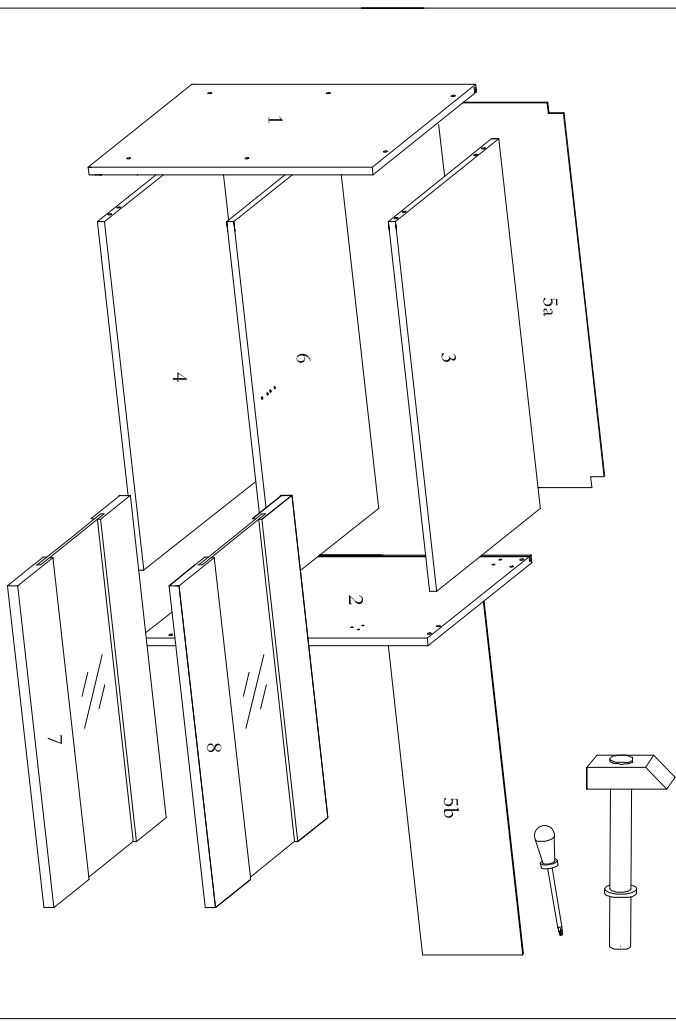
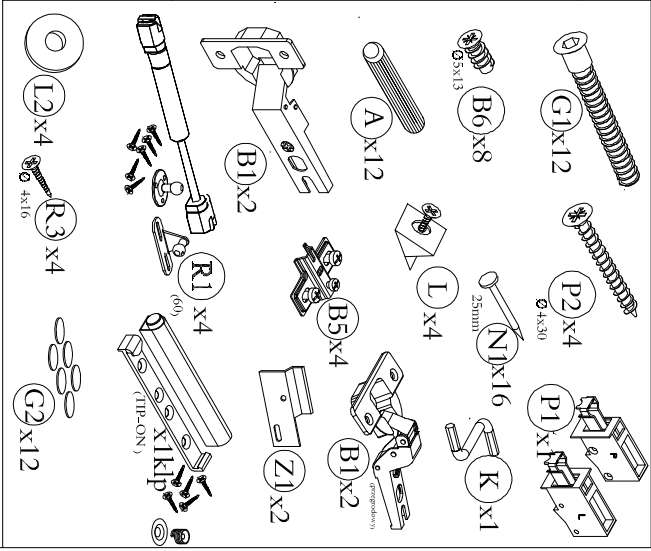
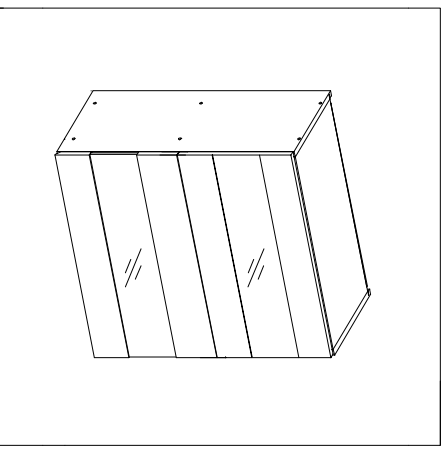
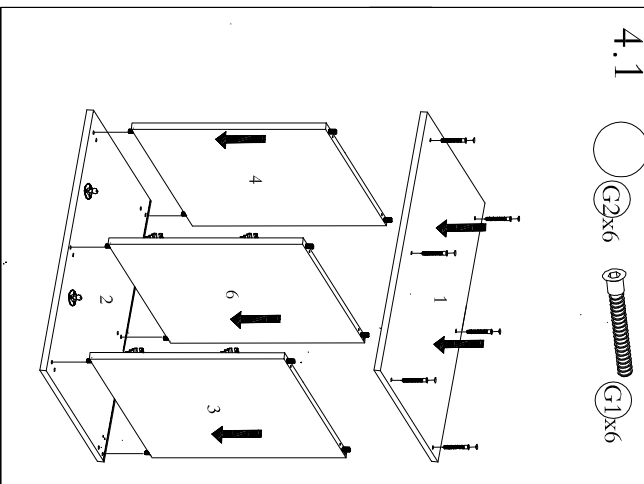


# CAMPARI

WOW6/72-WOW9/72


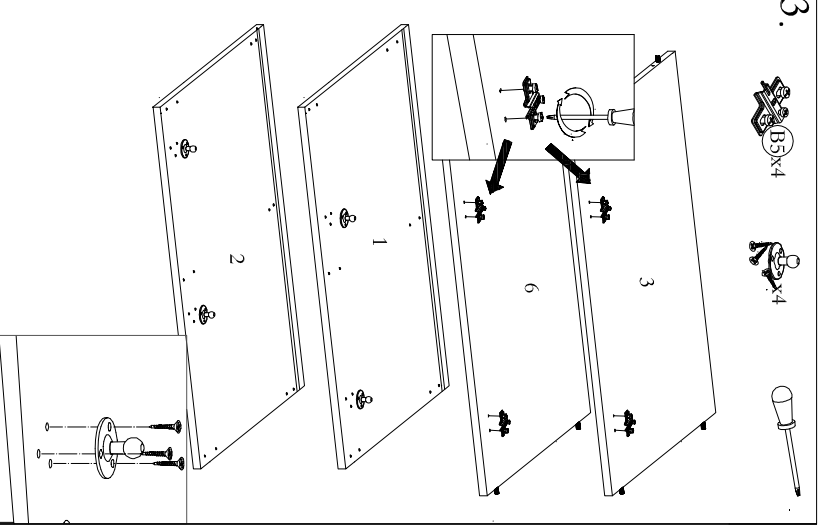


1/4


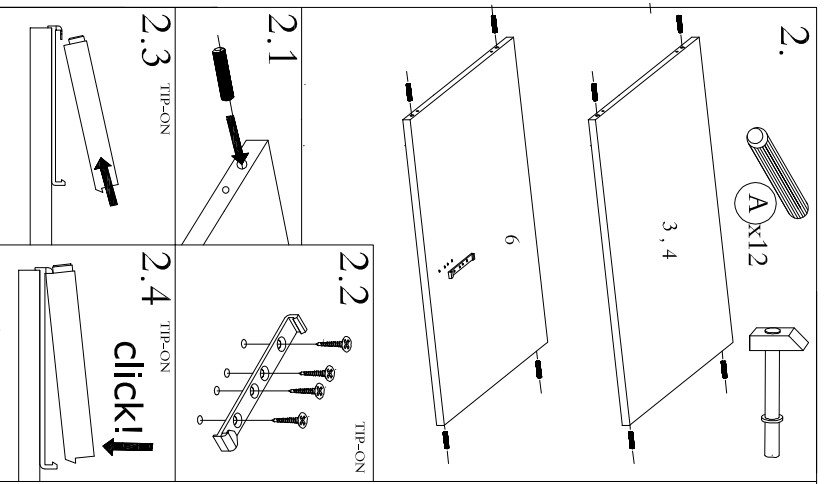


2/4



5.

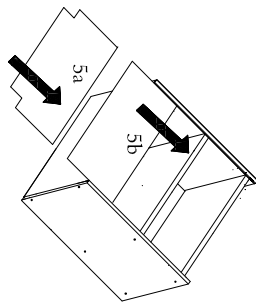


5.1

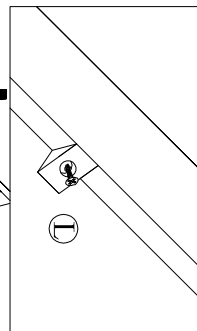


5.2 (N1)

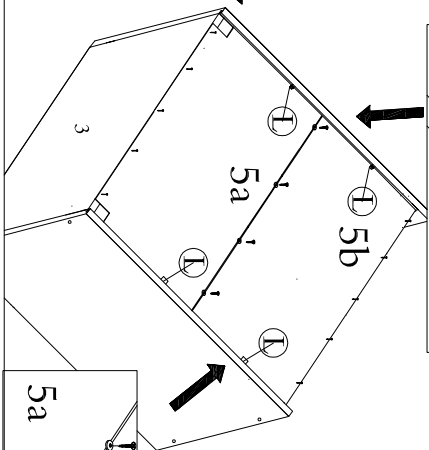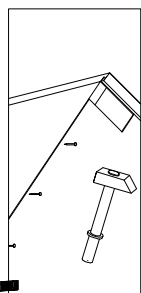





5.3  
R3 x4  
Ø 4x10  
L2 x4

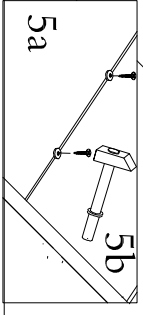

6.

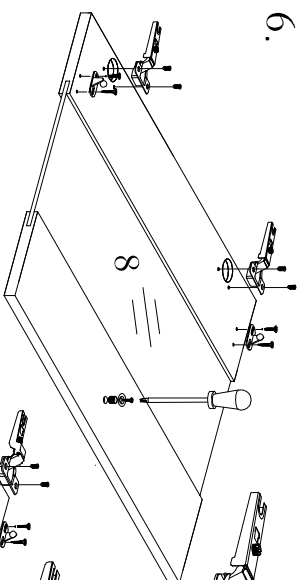


B1 x2  
B2 x2  
B6 x8  
Ø 5 x 13  
x1

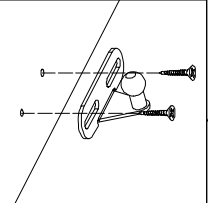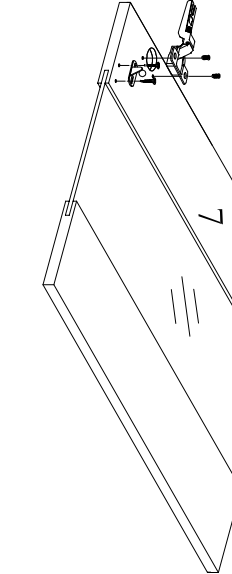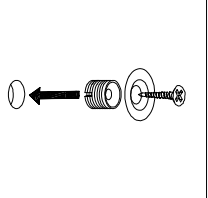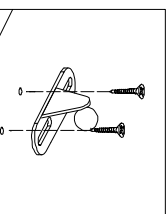


3/4





7.

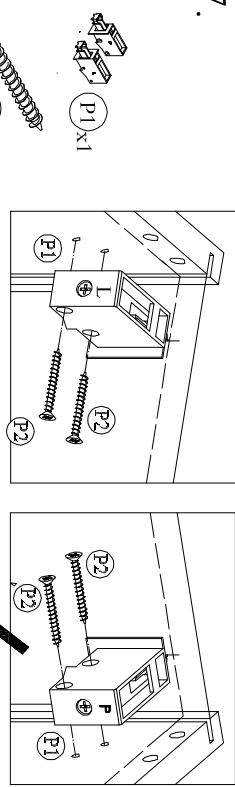


P1 x1  
P2 x4  
Ø 4 x 30

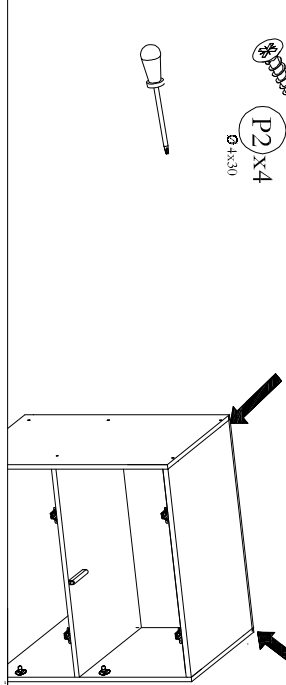


8.1

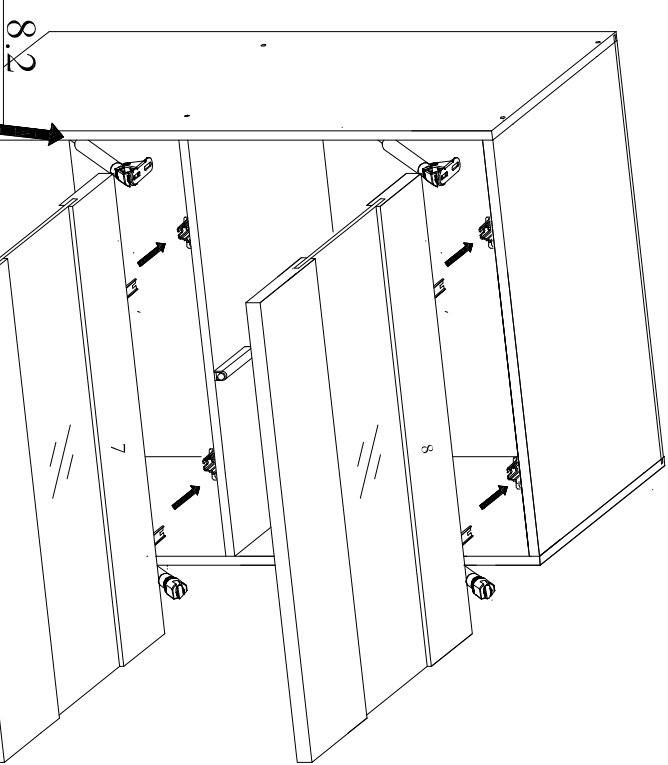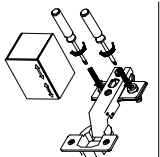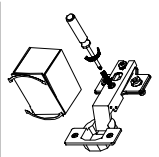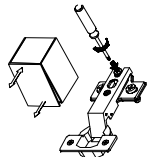

8.2

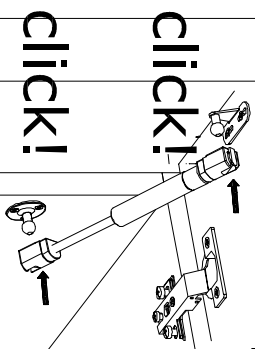

click!

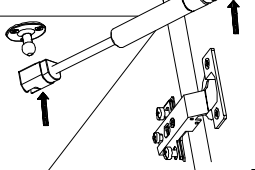

click!

4/4

