

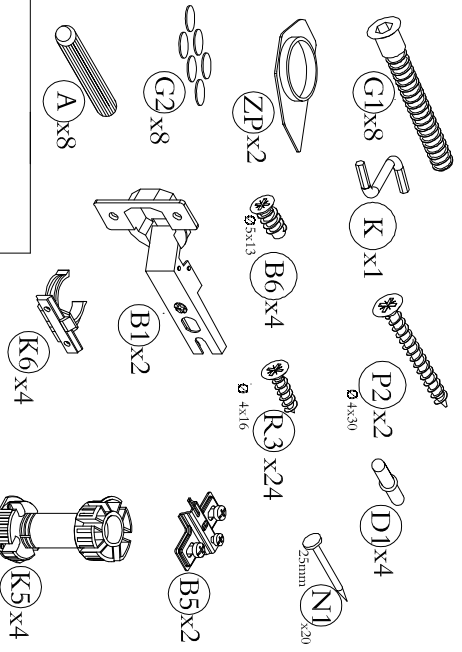
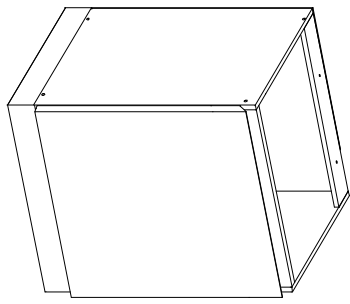





# CAMPARI D3-ID6

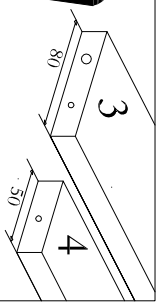


1.

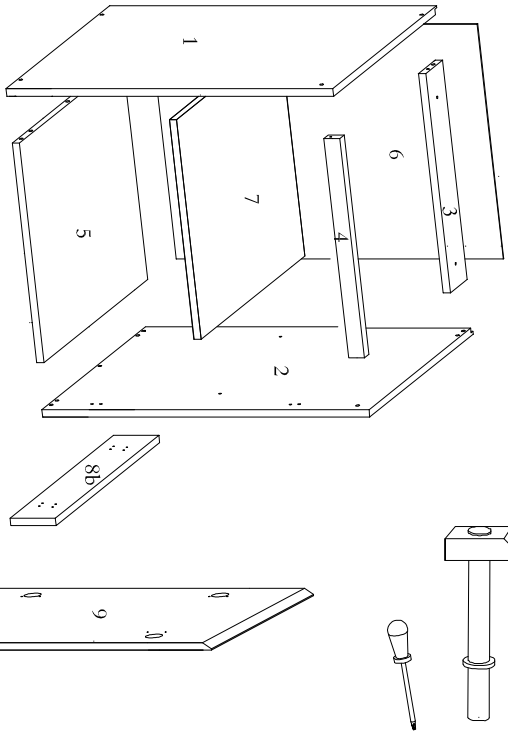

1/4

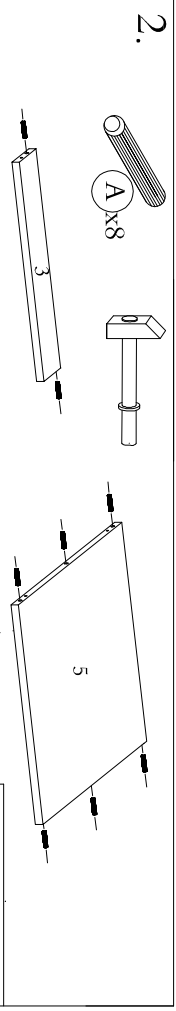


2.

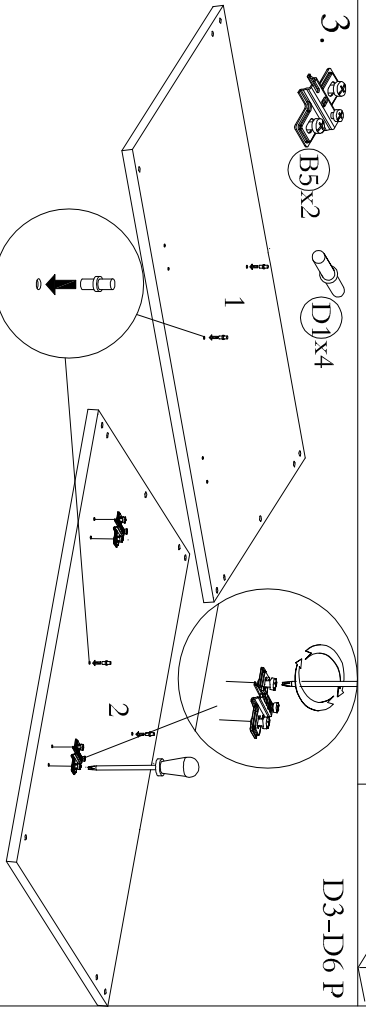

D3-ID6 P




3.









4.



5.


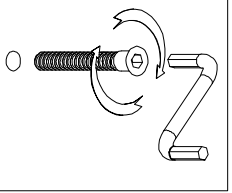
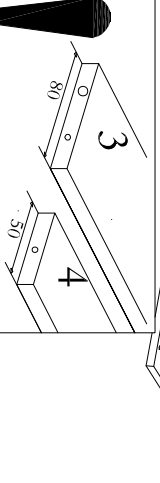
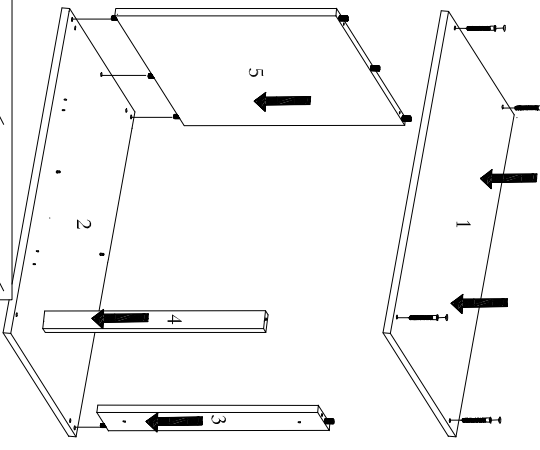


2/4

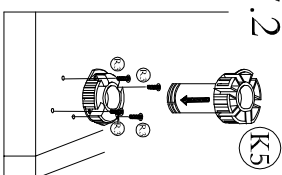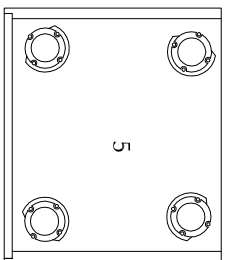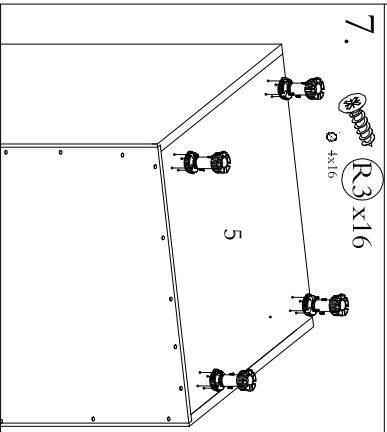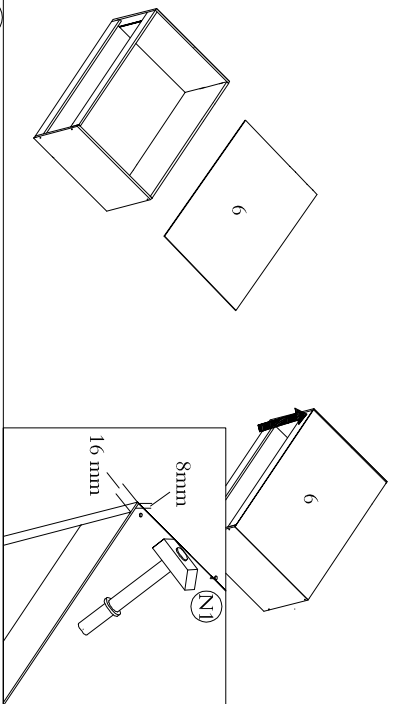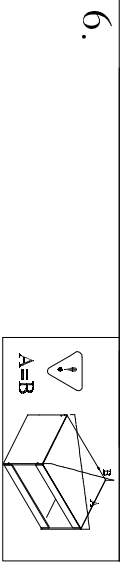


D3-D6L



D3-D6P

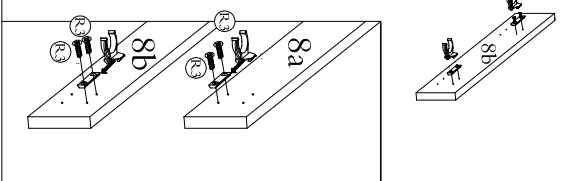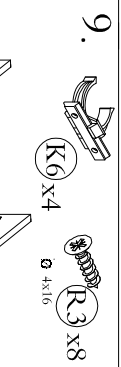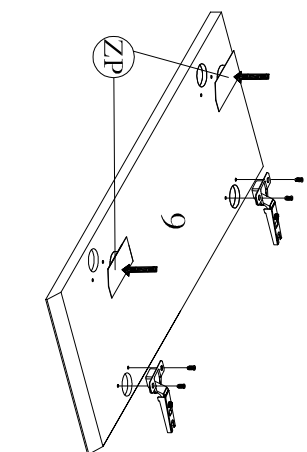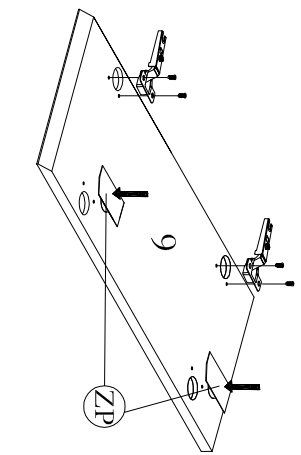

10.1

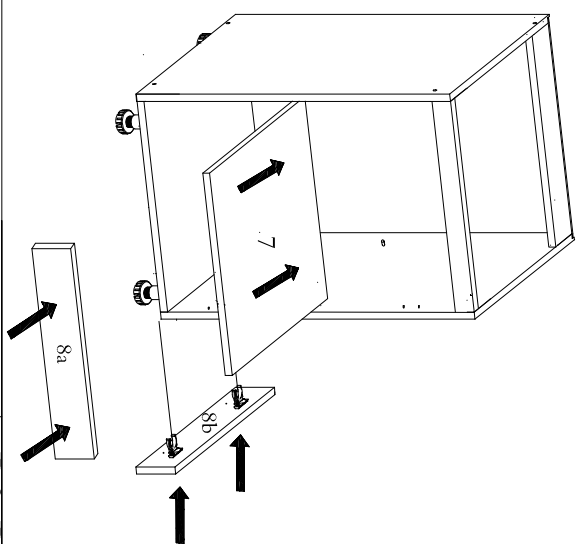

11.

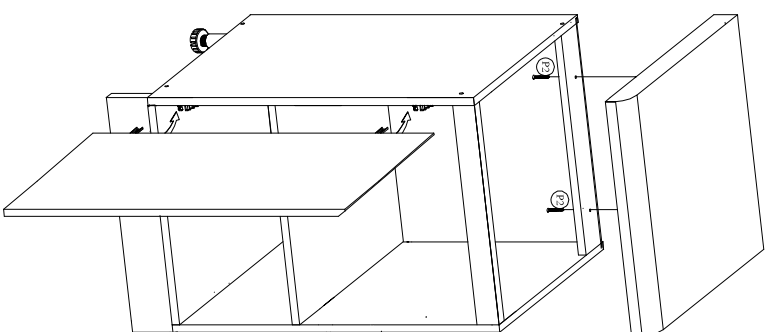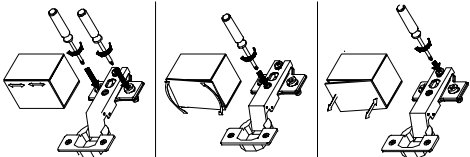

D3-D6L

