

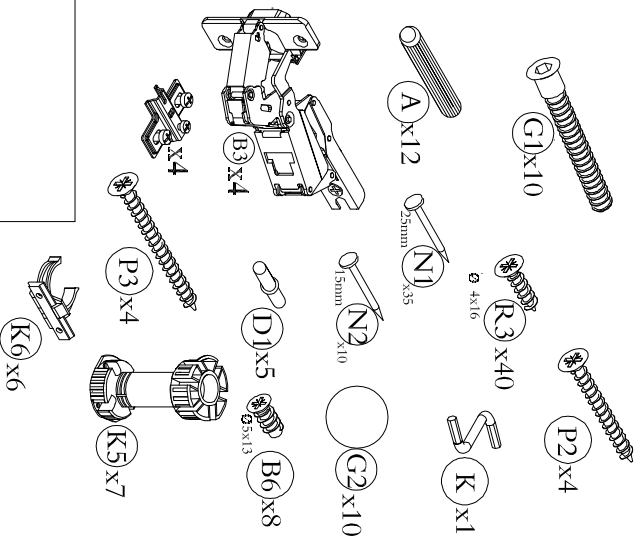



CAMPARI DNP 9

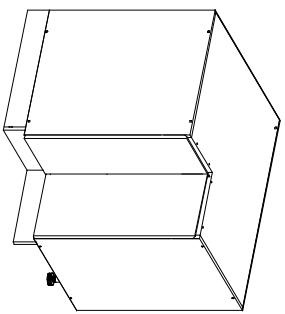


1.

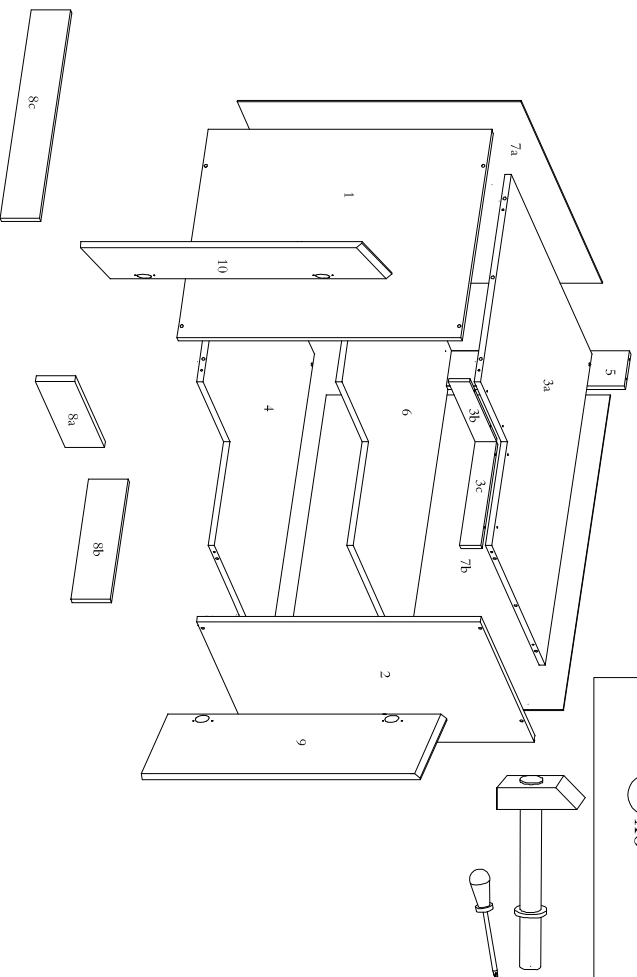


2.

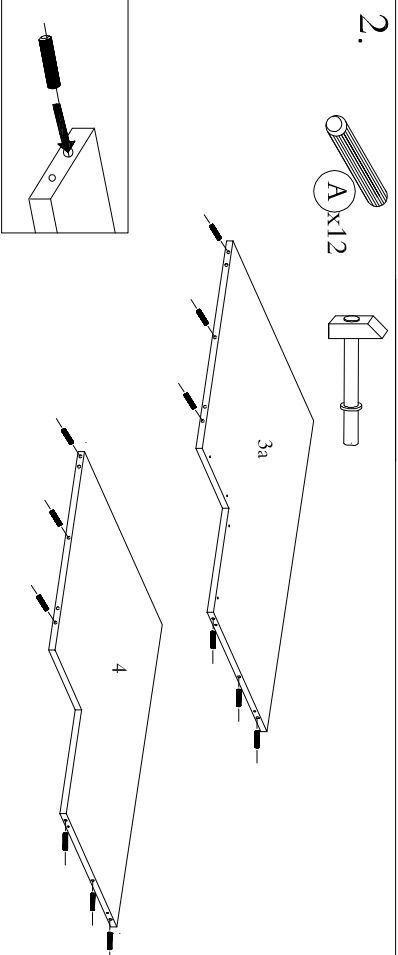


3.

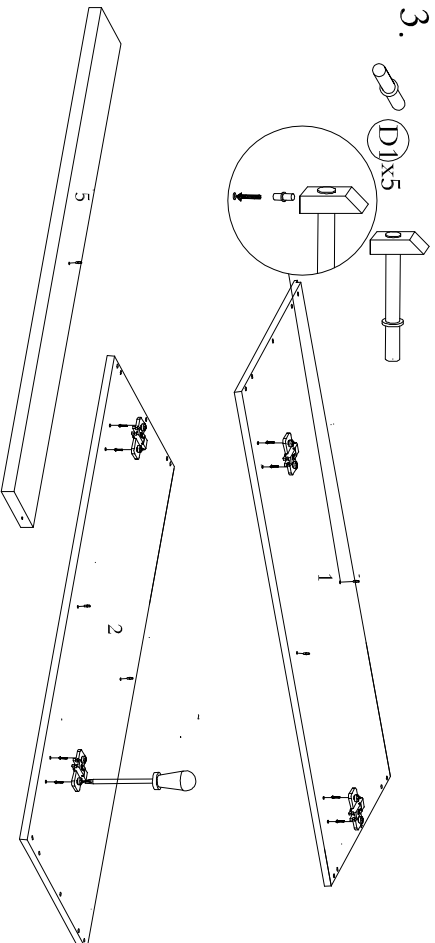




4.

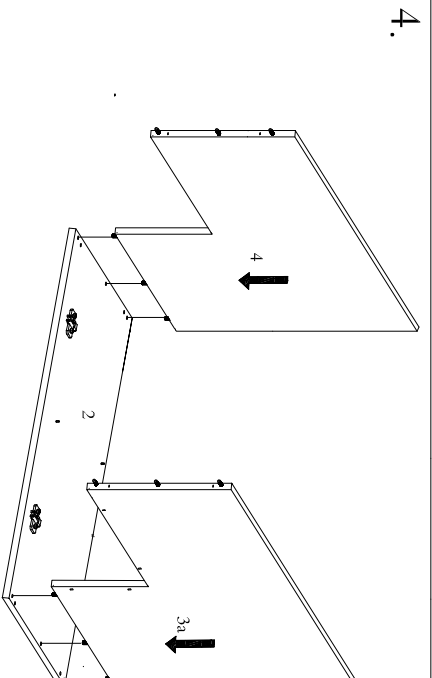




4.1

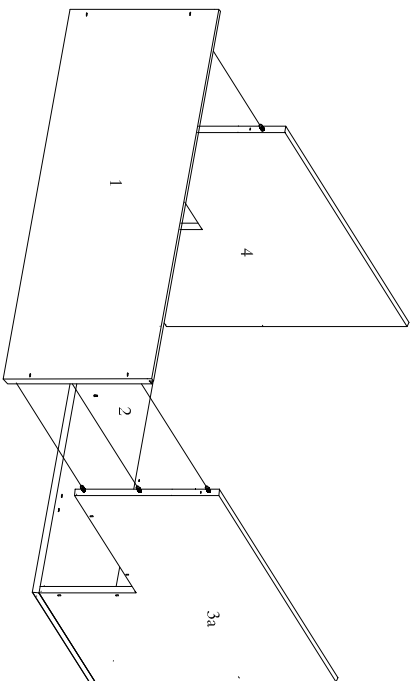

4.2

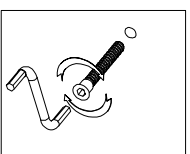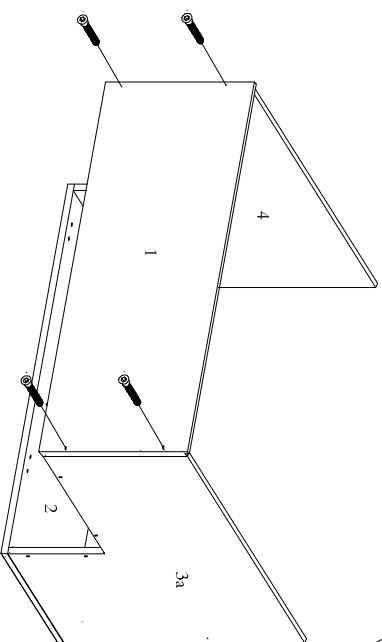


4.3

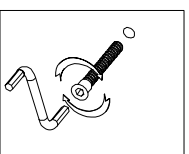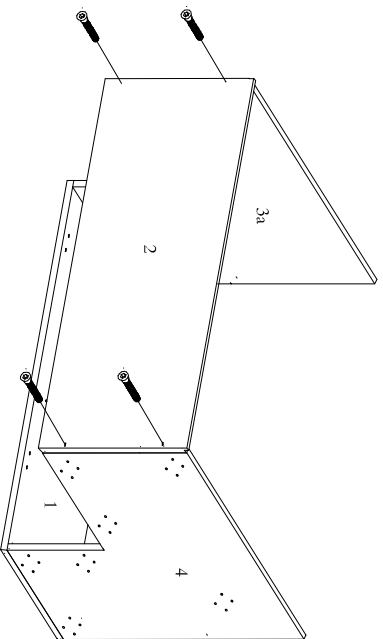



3/7

4.4




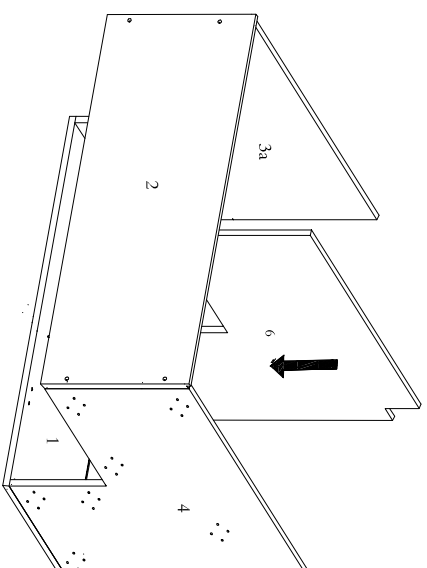


4.5

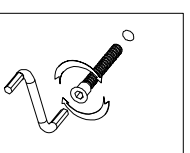
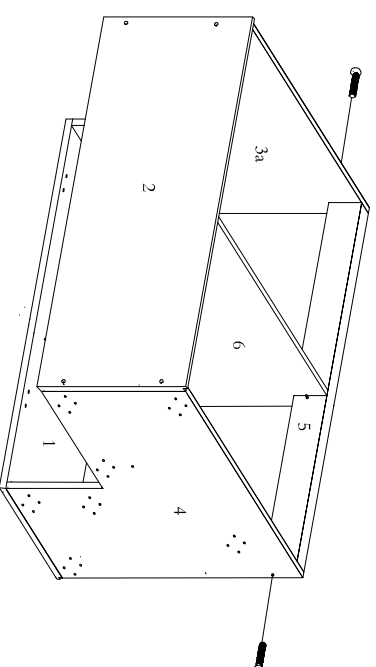


4/7


5.   N1 x15
Ø25mm

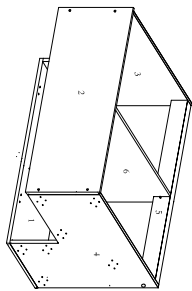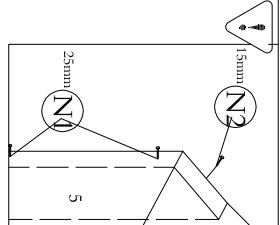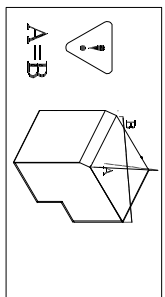


5.1

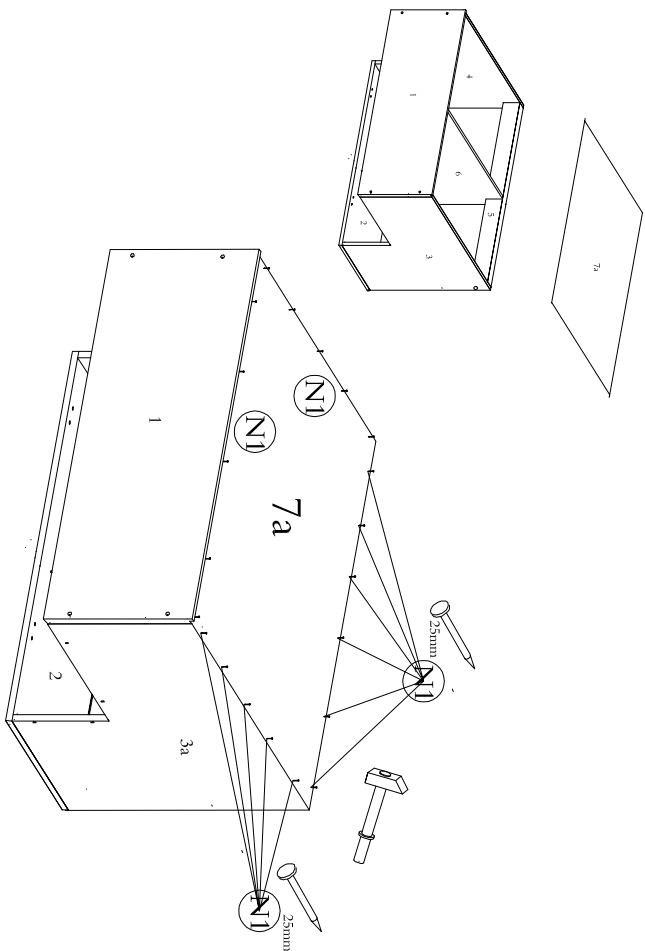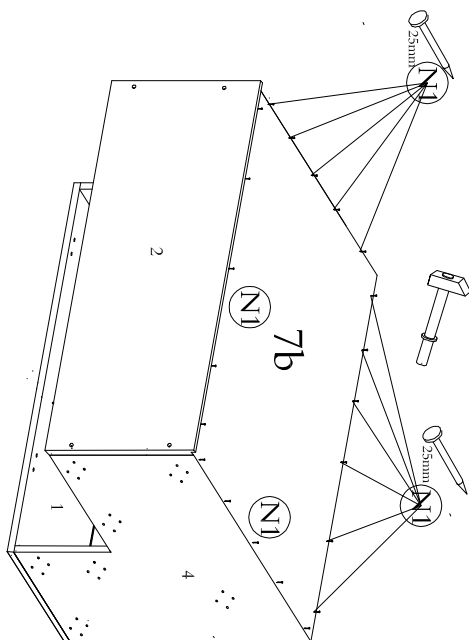


5/7


6.  R3 x16
4x16

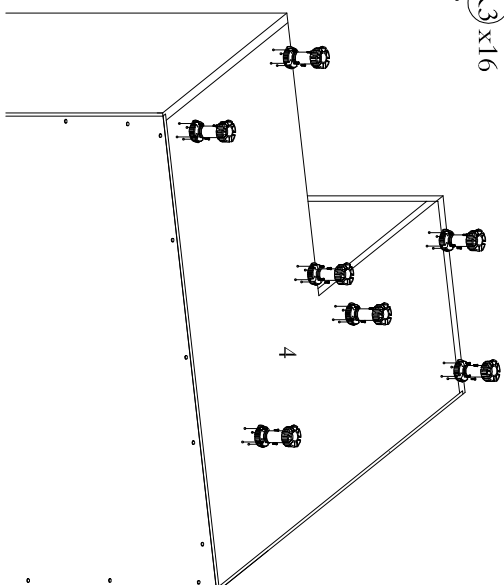



6.1

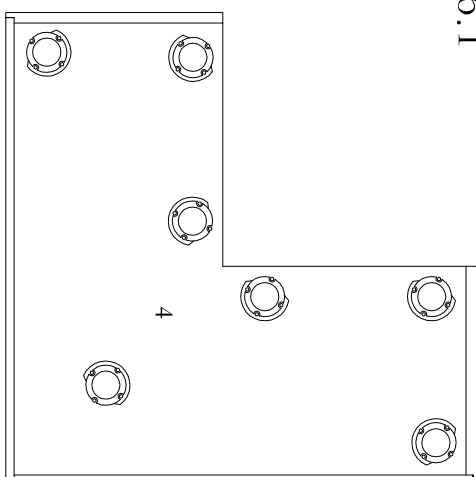


8.2  K5

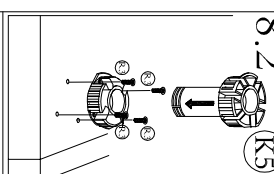

7. 

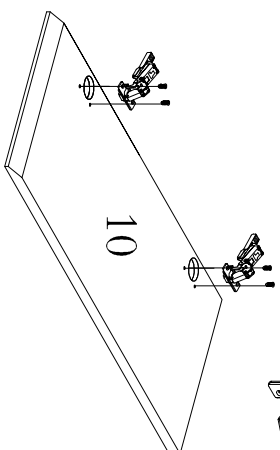

B3x4  Ø5x13  B6x8

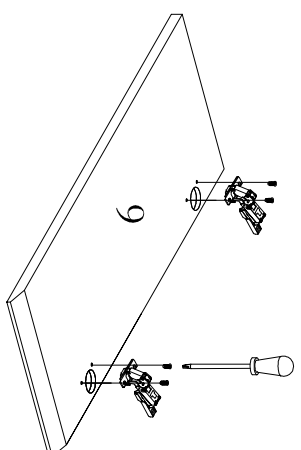

6/7

